



**TANGO
Device
Server**

SY900S_Group User's Guide

SY900S_Group Class

**Revision: release_2_0_2 - Author: sebleport
Implemented in C++**

Introduction:

this device controls one group of channels. Every channels of one group reply by the same way

Class Inheritance:

- Tango::Device_3Impl
 - SY900S_Group

Properties:

Device Properties		
Property name	Property type	Description
GroupNumber	Tango::DEV_LONG	one group is consisted of severals channels. this property assigns the group number.
SY900SgenericProxyServer	Tango::DEV_STRING	name of the generic device server proxy

Device Properties Default Values:

Property Name	Default Values
GroupNumber	No default value
SY900SgenericProxyServer	No default value

There is no Class properties.

States:

States	
Names	Descriptions
FAULT	memory allocation problem
STANDBY	wait for a command
RUNNING	SY900S busy

Attributes:

Scalar Attributes			
Attribute name	Data Type	R/W Type	Expert
voltagesAppliedOnAllChannels: sets the output voltage over all channels of the same group	DEV_DOUBLE	WRITE	No
deltaVoltagesOverAllChannels: This is a differential voltage. The Voltage attribute equal = current voltage + differential voltage sets the output voltage of all channels from a same group N	DEV_DOUBLE	WRITE	No
group: get the current device group number	DEV_LONG	READ	No

Commands:

More Details on commands....

Device Commands for Operator Level		
Command name	Argument In	Argument Out
Init	DEV_VOID	DEV_VOID
State	DEV_VOID	DEV_STATE
Status	DEV_VOID	CONST_DEV_STRING
On	DEV_VOID	DEV_VOID
Off	DEV_VOID	DEV_VOID
ResetError	DEV_VOID	DEV_VOID
SetChannelsTargetVoltage	DEV_VOID	DEV_VOID
GetLastError	DEV_VOID	DEV_STRING

1 - Init

- **Description:** This commands re-initialise a device keeping the same network connection.
After an Init command executed on a device, it is not necessary for client to re-connect to the device.
This command first calls the device *delete_device()* method and then execute its *init_device()* method.
For C++ device server, all the memory allocated in the *nit_device()* method must be freed in the *delete_device()* method.
The language device desctructor automatically calls the *delete_device()* method.
- **Argin:**
DEV_VOID : none.
- **Argout:**
DEV_VOID : none.
- **Command allowed for:**
 - Tango::FAULT
 - Tango::STANDBY
 - Tango::RUNNING

2 - State

- **Description:** This command gets the device state (stored in its *device_state* data member) and returns it to the caller.
- **Argin:**
DEV_VOID : none.
- **Argout:**

DEV_STATE : State Code

- **Command allowed for:**

- Tango::FAULT
- Tango::STANDBY
- Tango::RUNNING

3 - Status

- **Description:** This command gets the device status (stored in its *device_status* data member) and returns it to the caller.

- **Argin:**

DEV_VOID : none.

- **Argout:**

CONST_DEV_STRING : Status description

- **Command allowed for:**

- Tango::FAULT
- Tango::STANDBY
- Tango::RUNNING

4 - On

- **Description:** switches on all the channels of a same group

- **Argin:**

DEV_VOID :

- **Argout:**

DEV_VOID :

- **Command allowed for:**

- Tango::STANDBY
- Tango::RUNNING

5 - Off

- **Description:** switches off all the channels of a same group. Vouts = 0 V after pushing init. Moreover, after switching ON, Output voltages stay at 0 V.

- **Argin:**

DEV_VOID :

- **Argout:**

DEV_VOID :

- **Command allowed for:**

- Tango::FAULT
- Tango::STANDBY
- Tango::RUNNING

6 - ResetError

- **Description:** erase all error message
- **Argin:**
DEV_VOID :
- **Argout:**
DEV_VOID :
- **Command allowed for:**
 - Tango::FAULT
 - Tango::STANDBY
 - Tango::RUNNING

7 - SetChannelsTargetVoltage

- **Description:** This command sets all channels to the voltage defined by each target voltage attributes in the SY900S_channel device.
- **Argin:**
DEV_VOID :
- **Argout:**
DEV_VOID :
- **Command allowed for:**
 - Tango::FAULT
 - Tango::STANDBY
 - Tango::RUNNING

8 - GetLastError

- **Description:** this function get the las error message which has occurred
 - **Argin:**
DEV_VOID :
 - **Argout:**
DEV_STRING : error message
 - **Command allowed for:**
 - Tango::FAULT
 - Tango::STANDBY
 - Tango::RUNNING
-



TANGO
Device
Server

SY900S_Group User's Guide

SY900S_Group Class

Revision: release_2_0_2 - Author: sebleport
Implemented in C++

Introduction:

this device controls one group of channels. Every channels of one group reply by the same way

Class Inheritance:

- Tango::Device_3Impl
 - SY900S_Group

Properties:

Device Properties		
Property name	Property type	Description
GroupNumber	Tango::DEV_LONG	one group is consisted of severals channels. this property assigns the group number.
SY900SgenericProxyServer	Tango::DEV_STRING	name of the generic device server proxy

Device Properties Default Values:

Property Name	Default Values
GroupNumber	No default value
SY900SgenericProxyServer	No default value

There is no Class properties.

States:

States	
Names	Descriptions
FAULT	memory allocation problem
STANDBY	wait for a command
RUNNING	SY900S busy

Attributes:

Scalar Attributes			
Attribute name	Data Type	R/W Type	Expert
voltagesAppliedOnAllChannels: sets the output voltage over all channels of the same group	DEV_DOUBLE	WRITE	No
deltaVoltagesOverAllChannels: This is a differential voltage. The Voltage attribute equal = current voltage + differential voltage sets the output voltage of all channels from a same group N	DEV_DOUBLE	WRITE	No
group: get the current device group number	DEV_LONG	READ	No

Commands:

More Details on commands....

Device Commands for Operator Level		
Command name	Argument In	Argument Out
Init	DEV_VOID	DEV_VOID
State	DEV_VOID	DEV_STATE
Status	DEV_VOID	CONST_DEV_STRING
On	DEV_VOID	DEV_VOID
Off	DEV_VOID	DEV_VOID
ResetError	DEV_VOID	DEV_VOID
SetChannelsTargetVoltage	DEV_VOID	DEV_VOID
GetLastError	DEV_VOID	DEV_STRING

1 - Init

- **Description:** This commands re-initialise a device keeping the same network connection.
After an Init command executed on a device, it is not necessary for client to re-connect to the device.
This command first calls the device *delete_device()* method and then execute its *init_device()* method.
For C++ device server, all the memory allocated in the *nit_device()* method must be freed in the *delete_device()* method.
The language device desctructor automatically calls the *delete_device()* method.
- **Argin:**
DEV_VOID : none.
- **Argout:**
DEV_VOID : none.
- **Command allowed for:**
 - Tango::FAULT
 - Tango::STANDBY
 - Tango::RUNNING

2 - State

- **Description:** This command gets the device state (stored in its *device_state* data member) and returns it to the caller.
- **Argin:**
DEV_VOID : none.
- **Argout:**

DEV_STATE : State Code

- **Command allowed for:**

- Tango::FAULT
- Tango::STANDBY
- Tango::RUNNING

3 - Status

- **Description:** This command gets the device status (stored in its *device_status* data member) and returns it to the caller.

- **Argin:**

DEV_VOID : none.

- **Argout:**

CONST_DEV_STRING : Status description

- **Command allowed for:**

- Tango::FAULT
- Tango::STANDBY
- Tango::RUNNING

4 - On

- **Description:** switches on all the channels of a same group

- **Argin:**

DEV_VOID :

- **Argout:**

DEV_VOID :

- **Command allowed for:**

- Tango::STANDBY
- Tango::RUNNING

5 - Off

- **Description:** switches off all the channels of a same group. Vouts = 0 V after pushing init. Moreover, after switching ON, Output voltages stay at 0 V.

- **Argin:**

DEV_VOID :

- **Argout:**

DEV_VOID :

- **Command allowed for:**

- Tango::FAULT
- Tango::STANDBY
- Tango::RUNNING

6 - ResetError

- **Description:** erase all error message
- **Argin:**
DEV_VOID :
- **Argout:**
DEV_VOID :
- **Command allowed for:**
 - Tango::FAULT
 - Tango::STANDBY
 - Tango::RUNNING

7 - SetChannelsTargetVoltage

- **Description:** This command sets all channels to the voltage defined by each target voltage attributes in the SY900S_channel device.
- **Argin:**
DEV_VOID :
- **Argout:**
DEV_VOID :
- **Command allowed for:**
 - Tango::FAULT
 - Tango::STANDBY
 - Tango::RUNNING

8 - GetLastError

- **Description:** this function get the las error message which has occurred
 - **Argin:**
DEV_VOID :
 - **Argout:**
DEV_STRING : error message
 - **Command allowed for:**
 - Tango::FAULT
 - Tango::STANDBY
 - Tango::RUNNING
-

ESRF - Software Engineering Group

Frame Alert

This document is designed to be viewed using the frames feature. If you see this message, you are using a non-frame-capable web client.

[Link to Non-frame version.](#)



TANGO
Device
Server

SY900S_Group

Device Commands Description

SY900S_Group Class

Revision: release_2_0_2 - Author: sebleport

1 - Init

- **Description:** This commands re-initialise a device keeping the same network connection.
After an Init command executed on a device, it is not necessary for client to re-connect to the device.
This command first calls the device *delete_device()* method and then execute its *init_device()* method.
For C++ device server, all the memory allocated in the *nit_device()* method must be freed in the *delete_device()* method.
The language device desctructor automatically calls the *delete_device()* method.
- **Argin:**
DEV_VOID : none.
- **Argout:**
DEV_VOID : none.
- **Command allowed for:**
 - Tango::FAULT
 - Tango::STANDBY
 - Tango::RUNNING

2 - State

- **Description:** This command gets the device state (stored in its *device_state* data member) and returns it to the caller.
- **Argin:**
DEV_VOID : none.
- **Argout:**
DEV_STATE : State Code

- **Command allowed for:**

- Tango::FAULT
- Tango::STANDBY
- Tango::RUNNING

3 - Status

- **Description:** This command gets the device status (stored in its *device_status* data member) and returns it to the caller.

- **Argin:**

DEV_VOID : none.

- **Argout:**

CONST_DEV_STRING : Status description

- **Command allowed for:**

- Tango::FAULT
- Tango::STANDBY
- Tango::RUNNING

4 - On

- **Description:** switches on all the channels of a same group

- **Argin:**

DEV_VOID :

- **Argout:**

DEV_VOID :

- **Command allowed for:**

- Tango::STANDBY
- Tango::RUNNING

5 - Off

- **Description:** switches off all the channels of a same group. Vouts = 0 V after pushing init. Moreover, after switching ON, Output voltages stay at 0 V.

- **Argin:**

DEV_VOID :

- **Argout:**

DEV_VOID :

- **Command allowed for:**
 - Tango::FAULT
 - Tango::STANDBY
 - Tango::RUNNING

6 - ResetError

- **Description:** erase all error message
- **Argin:**
DEV_VOID :
- **Argout:**
DEV_VOID :
- **Command allowed for:**
 - Tango::FAULT
 - Tango::STANDBY
 - Tango::RUNNING

7 - SetChannelsTargetVoltage

- **Description:** This command sets all channels to the voltage defined by each target voltage attributes in the SY900S_channel device.
- **Argin:**
DEV_VOID :
- **Argout:**
DEV_VOID :
- **Command allowed for:**
 - Tango::FAULT
 - Tango::STANDBY
 - Tango::RUNNING

8 - GetLastError

- **Description:** this function get the las error message which has occurred
- **Argin:**
DEV_VOID :

- **Argout:**
DEV_STRING : error message
- **Command allowed for:**
 - Tango::FAULT
 - Tango::STANDBY
 - Tango::RUNNING

ESRF - Software Engineering Group